
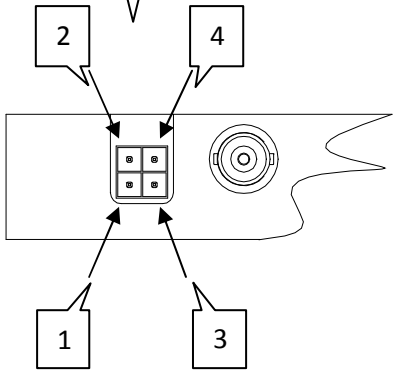


# Installation of HPMC001 HF Multicoupler

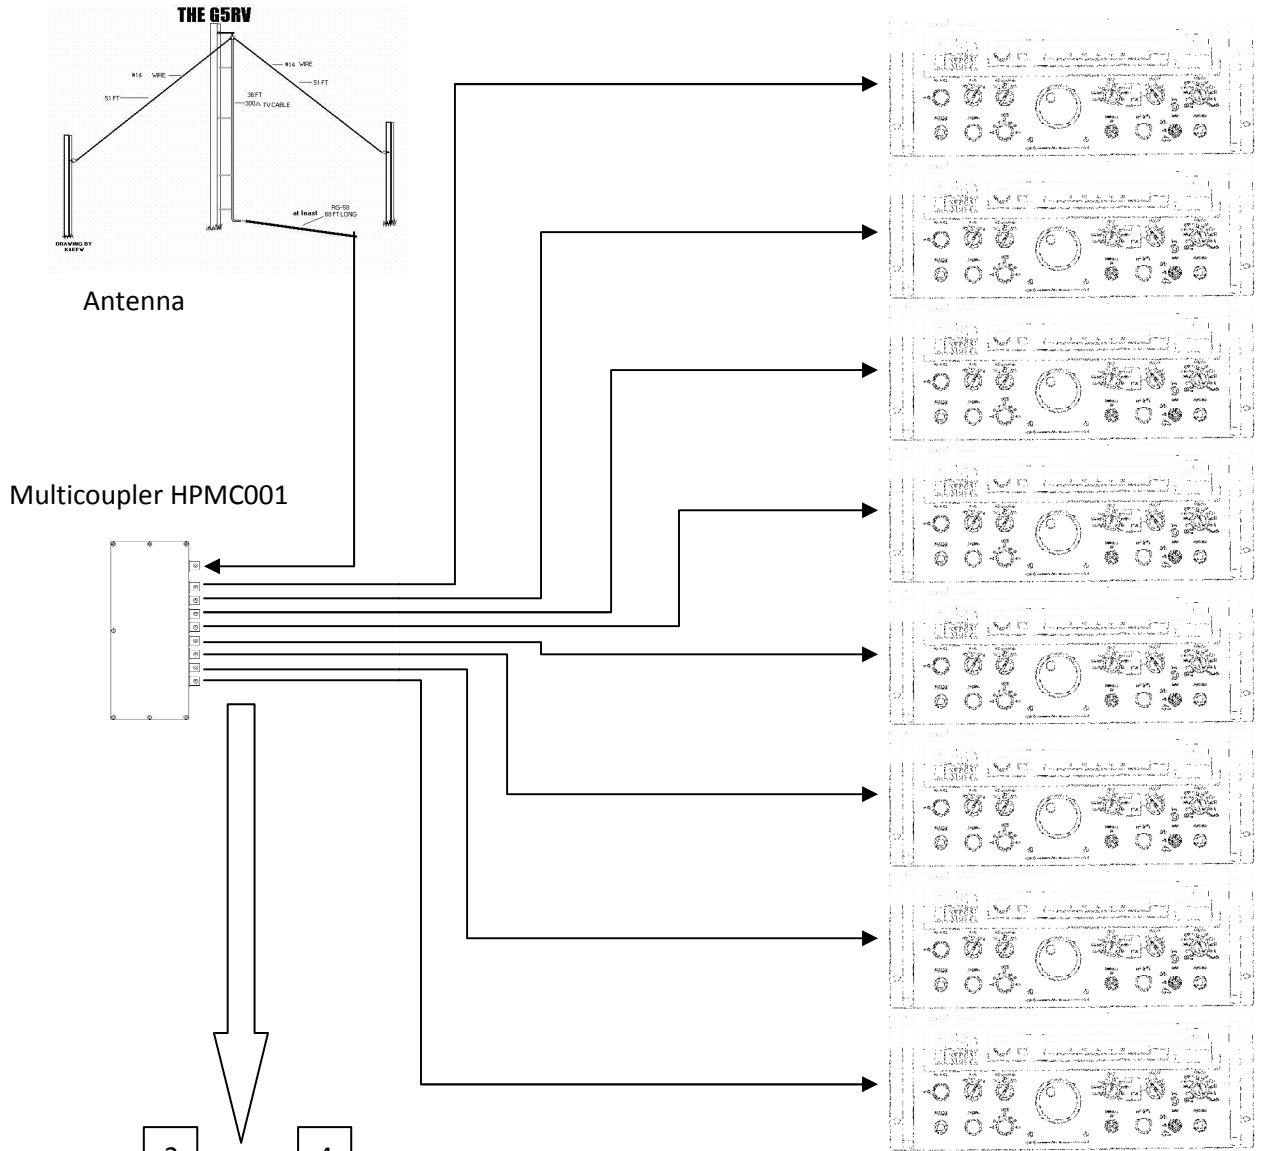

PL 1 Pin Configuration

1. DC Supply 0V/GND
2. DC Supply +15-24 V
3. Alarm +ve (C)
4. Alarm -ve (E)

HF Receivers. Up to eight receivers can be connected to the multicouplers output. Unused outputs need to be terminated.

